



Option 2 — Low Flow Cutoff

To access the Low Flow Cutoff menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **2** for the **Flow Cutoff** menu, and then press **E**.

```
FLOW CUTOFF SW  
>ON
```

The Flow Cutoff Switch prompt appears.

4. Press **P** to continue.

```
LO FLOW CUTOFF  
>0.00000000 SCMH
```

The Lo Flow Cutoff prompt appears.

5. Press **H** to exit.

The main Display mode (DSP) prompt appears.