



Option 2 — Mid Drift Check

To access the Mid Drift Check menu in Extended Utilities mode:

1. Press **E**.
2. Enter your **Extended Utilities** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **2** for the **Mid Drift Check** menu, and then press **E**.

```
MID DRIFT CHECK
START TEST> YES
```

The Mid Drift Check prompt appears.

5. Press the arrow keys to select **YES** or **NO**, and then press **E**.

```
MID DRIFT CHECK
IS RUNNING ...
```

The Mid Drift Check starts.

```
MID DRIFT CHECK
% DIFF = 0.018
```

The prompt showing the percentage difference appears.

```
Vin= 1.65000 V
Vout= 1.65032 V
```

The prompt showing the voltage appears.

6. Press **E** to return to the Util Mode Option prompt.