



## Option 4 — Cycle Drift Check

To access the Cycle Drift Check menu in Extended Utilities mode:

1. Press **E**.
2. Enter your **Extended Utilities** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **4** for the **Cycle Drift Check** menu, and then press **E**.

---

```
CYCLE DRIFT CHECK
START TEST> YES
```

---

The Cycle Drift Check prompt appears.

5. Press the arrow keys to switch from **YES** to **NO**, and then press **E**.

---

```
CYCLE DRIFT CHECK
IS RUNNING ...
```

---

The information for zero, mid, and span drift checks appear, as shown for each option.

6. Press **E** to return to the Util Mode Option prompt.